

Emerson SmartVoice Tower Fan User Manual

Model ES4201R
Height: 42 inches

Important Notice

Read this manual completely before first use.
Keep this manual for future reference.

Product Overview

The Emerson SmartVoice Tower Fan uses **offline voice control**. Voice commands work immediately after plugging in the appliance. No app, Wi-Fi, Bluetooth, or hub is required.

You can control cooling using:

- Voice commands
 - The touchscreen control panel
 - Remote control
-

Technical Specifications

- Dimensions: 11.8 in. x 11.8 in. x 42.1 in.
 - Weight: 9.3 lbs.
 - Input voltage: AC 120 V, 60 Hz
 - Rated power: 50W
 - Timer selection: 1 - 15 hours
 - Number of fan speeds: 3
 - Modes: Normal, Sleep
 - Oscillating range: 70°
 - Voice control: Yes
 - Remote control included: Yes
-

What's Included

The box contains:

- Tower fan
 - Base parts x2
 - Wing screws x4
 - Detachable cord holder
 - Remote control
 - User manual
 - Quick start guide
-

Important Safety Information

General Safety Warnings

Warning. Read all instructions before use.

- Use only as intended (household use only; not commercial).
 - Supervise closely around children and people with reduced abilities.
 - Do not insert objects into air openings.
 - Do not modify or repair the fan yourself. Contact service/support if damaged or missing parts.
 - Unplug before cleaning or maintenance.
 - Keep packaging away from children and pets.
 - Do not pull/yank the power cord; keep cord away from heat sources.
 - Prevent tipping: keep children/pets away; do not let children climb on the fan.
 - Not intended for children under 8.
-

Battery ingestion hazard (remote control)

The remote contains a **button/coin battery**.

- Keep batteries away from children.
- If swallowed, it can cause severe injury or death in as little as 2 hours.
- Seek immediate medical attention if ingestion is suspected.

Location safety

- Indoor use only; do not use outdoors.
- Place on a stable, flat surface.
- Do not use in wet/damp locations or where it could fall into water.
- Turn off and unplug before moving.

Electrical safety

- Do not leave unattended during use; unplug when not in use.
- Do not use if cord/plug is damaged or fan malfunctions or is dropped/damaged.
- Do not run cord under carpets or cover with rugs; route to avoid trips.
- Plug directly into a wall outlet (no extension cords or power strips).
- Warm plug/cord can be normal, but **hot**, distorted, or loose-fitting outlets must be replaced by a qualified electrician.
- Polarized plug: fits only one way; do not bypass this feature.

Voice Control Safety

- Always unplug when not in use.
- Disable voice control when children are nearby.
- Do not place near TVs or speakers that may trigger commands.
- Always visually confirm the appliance starts or stops correctly.
- Never start cooling by voice unless you are in the same room.
- If the appliance behaves unexpectedly, unplug immediately.

Assembly (setup)

1. Remove all packaging materials. Confirm no parts are missing or damaged.
2. Connect front and rear base pieces: press edges until they click in place.
3. Unscrew the lock nut from the bottom of the fan body.
4. Thread the power cord through the base opening. Insert the fan body into the base.
5. Thread the power cord through the lock nut, then tighten the lock nut to secure the base.

6. Secure the cord into the cord clamps on the underside of the base.
-

Controls (fan panel and remote)

Display

- Shows room temperature when plugged in.
- Shows timer setting when adjusting timer.

Buttons

- **Power**
 - **Timer**
 - **Speed**
 - **Mode**
 - **Rotate**
 - **Light**
 - **Silent Mode** (remote only)
-

Aroma Box

1. Pull out the aroma box.
2. Drip aromatherapy liquid onto the sponge.
3. Insert the aroma box into the fan.
4. Clean the aroma compartment with a damp cloth after each use.

Sponge Cleaning

- Remove the sponge from the aroma compartment.
 - Rinse the sponge with warm water. Use mild soap if needed.
 - Let the sponge dry and place it back into the aroma compartment.
-

Wake Word

The fan listens for the following wake word:

- “Hey Fan”
-

Using Voice Control

Basic Voice Commands

Power:

- “Turn on the fan” / “Fan on”
- Result: The fan powers on.
- “Turn off the fan” / “Fan off”
- Result: The fan powers off.

Speed:

- “Low speed” / “Low fan” / “Fan low”
- Result: Set to low fan speed.
- “Medium speed” / “Medium fan” / “Fan medium”
- Result: Set to medium fan speed.
- “High speed” / “High fan” / “Fan high”
- Result: Set to high fan speed.
- “Fan speed up”
- Result: Increase fan speed.
- “Fan speed down”
- Result: Decrease fan speed.

Oscillation:

- “Rotation on” / “Rotate on”
- Result: Fan will oscillate at 70 degrees.
- “Rotation off” / “Rotate off”
- Result: Fan will stop oscillating at 70 degrees.

Timer:

- “Cancel timer”
- Result: Stop the sleep timer.
- “Sleep in [1–15] hours”
- “Set timer for [1–15] hours”
- Result: Set the time the fan will automatically turn off.

Sleep mode

- “Sleep mode”
- Result: The sleep mode is activated.
- “Normal mode”
- Result: The default mode is activated.

Light

- “Lights on”
- Result: The nightlight turns on.
- “Lights off”
- Result: The nightlight turns off.”

Volume:

- Volume up
- Result: Voice volume is increased.
- Volume down
- Result: Voice volume is decreased.
- Volume all the way up
- Result: Voice volume is increased to max.
- Volume all the way down
- Result: Voice volume is decreased to a minimum.

Voice/beep responses:

- “Voice response on”
- Result: Fan’s voice responses turn on.
- “Voice response off” (beeps only)
- Result: Fan’s voice responses turn off.
- “Voice control off”
- Result: Fan’s voice control turns off.
- “Voice control on”
- Result: Fan’s voice control turns on.
- “Be quiet” (turns off beep and voice responses)
- Result: Fan will not respond with voice or beeps.

Remote battery replacement (CR2025)

Caution: Explosion risk if battery is replaced incorrectly. Replace only with the same/equivalent type.

Steps:

1. Press the battery holder lock tab on the back of the remote.
 2. Pull the battery holder out.
 3. Replace with a **CR2025** battery.
 4. Insert battery with **(+) facing down** and **(-) facing up** (as specified in the manual).
 5. Push holder back in until secure.
-

Storage

- Unplug and hang the cord on the hook on the back of the fan.
 - Store the remote in the fan's rear storage compartment.
 - For long-term storage, place in original box and store in a cool, dry place.
-

Cleaning and maintenance

- Turn off and unplug before cleaning.
 - Dust with a soft, dry cloth.
 - Wipe with a soft cloth dampened with warm water for grime.
 - Do not use detergents, abrasives, alcohol, gasoline, or similar agents.
-

Fused safety plug (fuse replacement)

This fan has a fused safety plug to protect from overload/short circuits.

Steps:

1. Unplug from the wall outlet.
 2. Open fuse cover by sliding the tab on top of the plug toward the prongs.
 3. Remove fuse carefully.
 4. Replace with a **2.5-amp, 125 V fuse**.
 5. Close fuse cover by sliding it back.
-

Troubleshooting

Fan will not turn on:

- Confirm plugged into a grounded wall outlet.
- Confirm outlet has power; try another outlet.
- Check that cord is not damaged.

Unusual sound/noise:

- Place on a hard, flat surface.
- Check for damage or objects stuck inside.

Fan randomly turns off:

- Check that no remote buttons are being pressed accidentally.
- If you suspect a malfunction, stop using and contact support.

Compliance and disposal

- FCC Part 15 compliance statement included in original manual.
- Product is ETL listed to applicable U.S. safety standards.
- Do not dispose with household waste; recycle via appropriate electronics programs/retailer systems.

Warranty registration and support

Register the product at the manufacturer's site listed in the manual to activate the warranty.

Support phone: 888-886-7188

Hours: 9 a.m. to 7 p.m. Eastern Time

Email: support@emersonsmart.com

Find us on Social at

Instagram : Emersonsmartglobal