



SmartVoice™ Fan-Heater



No App · No Wi-Fi · No Hub
Smart Made Simple - Just Talk!



ES200FR

INTRODUCTION

Thank you for choosing Emerson SmartVoice Fan-Heater ES200FR! The Emerson SmartVoice Fan-Heater is an offline voice-controlled heater. Freely control the heater with just the sound of your voice – no Wi-Fi, Bluetooth, or other wireless connection setup required.

This user manual is intended to provide guidelines to ensure that the operation of this product is safe and does not pose any risk to the user. Retain this manual for future reference.

PACKAGE CONTENTS

User
Manual



Remote
Control



Fan-
Heater



GENERAL SAFETY

WARNING! Please read all the safety precautions and operating instructions before using this product. Failure to follow the guidelines established here may result in user injury or damage to the product.

- This product is not a toy. This product is not intended for use by children under the age of 8 years old.
- DO NOT use this product to dry or heat clothes, shoes, pipes, or other items.
- Use the product only as intended. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- This product is intended for household use only. It is not intended for commercial use.
- Extreme caution is necessary when any heater is used by or near children or individuals with reduced physical, sensory, or mental capabilities.

- DO NOT attempt to modify or repair the product by yourself. Doing so could void the warranty and cause damage or personal injury. Only a repair technician may disassemble or repair this product.
- Make sure that no pieces of packaging material have been left between parts of the appliance. It may be necessary to pass over the appliance with a vacuum cleaner.
- If the heater has been damaged or is missing any parts, do not use and contact Customer Support.
- Disconnect the heater from the wall outlet before performing any maintenance on the product.
- DO NOT use water, detergents, abrasive cleaning liquids, or agents (alcohol, gasoline, etc.) to clean the product.
- DO NOT insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock or fire, or damage the heater. Keep packaging material away from children and pets.

- DO NOT twist, pull, or yank the power cord of this product.
- Never place heavy objects on this product.
- DO NOT let children climb on this product.
- Keep children and pets away from this product to prevent it from tipping over.
- Never place the power cord near any heat source.
- DO NOT cover the air inlet and outlet of the heater while the heater is in use.
- DO NOT use the heater near flammable and combustible materials.
- There may be a trace of smoke or odor when the unit is first operated. This indicates that a drop of oil fell on the heating coil during the manufacturing process. It will quickly evaporate and should not recur.
- This heater is hot when in use. To avoid burns, DO NOT let bare skin touch the hot surface of the heater.

BATTERY SAFETY FOR REMOTE CONTROL

- DO NOT mix old and new batteries.
- Dispose of used batteries properly according to local regulations.
- Insert batteries with correct polarity (+/-) as marked in the battery compartment.
- Remove batteries if the product will not be used for an extended period of time to avoid leakage and corrosion.
- Keep batteries out of reach of children and pets.
- DO NOT recharge, short-circuit, or disassemble batteries.

OVERHEAT PROTECTION

This unit is equipped with a built-in overheat protection system. If the unit is left on for too long, the unit will automatically shut off to prevent damage or fire risk.

TIP-OVER PROTECTION

This unit is equipped with tip-over protection. If the heater is accidentally knocked over, it will automatically shut off to prevent damage or fire risk.

LOCATION SAFETY

- DO NOT use the product outdoors. This product is intended for indoor use only.
- Ensure the heater is on a stable, secure surface to eliminate the potential of tipping it over.
- This heater is not intended for use in wet or damp locations. Never place the heater where it may fall into a bathtub or another water container.
- Make sure the heater is placed in a well-ventilated area.
- Always use the handle to move the heater. Make sure the heater is off and unplugged before moving it.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front, sides, and rear of the heater.
- A heater has hot and sparking parts inside. DO NOT use it in areas where gasoline, paint, or flammable liquids are used or stored.
- To prevent a possible fire, DO NOT block the air intake or exhaust openings in any manner. DO NOT use the heater on soft surfaces, like a bed, where openings may become blocked.

ELECTRICITY SAFETY

- DO NOT leave the heater unattended when in use. Always unplug the heater when not in use.
- DO NOT operate the heater with a damaged cord or plug, after the heater malfunctions, or has been dropped or damaged in any manner. Discard the heater, or return it to an authorized service facility for examination and/or repair.
- DO NOT run cord under carpeting. DO NOT cover the cord with throw rugs, runners, or similar coverings. DO NOT route the cord under furniture or appliances. Arrange the cord away from high-traffic areas and where it will not be tripped over.
- To disconnect the heater, turn the controls off, then remove the plug from the outlet.
- To protect against the risk of electrical shock, never submerge this heater in water or any other liquid.
- Always plug the heater directly into a wall outlet/receptacle.
- Never use the heater with an extension cord or relocatable power tap (outlet/power strip).

- Never use the heater with an extension cord or relocatable power tap (outlet/power strip).
- If there is a loose fit between the plug and the socket or the plug becomes very hot, the socket may need to be replaced. Check with a qualified electrician to replace the socket.
- This appliance has a polarized plug (one prong is wider than the other).
- To reduce the risk of electric shock, this plug is designed to fit into a polarized outlet in only one direction. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to bypass this safety feature.
- It is normal for the plug and cord to feel warm to the touch.
- A plug or cord that becomes hot to the touch or becomes distorted in shape may be a result of a worn electrical outlet. Worn outlets or receptacles should be replaced prior to further use of the heater.
- Plugging the heater into a worn outlet/ receptacle may result in overheating of the power cord or fire.
- **CAUTION:** To avoid any accidental burns, never place hands on vents or sides when the appliance is in operation.

WARNING – RISK OF HYPERTHERMIA

Prolonged exposure to heat from this appliance can lead to hyperthermia. This risk is especially high for the elderly, children, persons with disabilities, or those unable to adjust the heating source.

Use caution to avoid overheating individuals.

DO NOT allow direct, continuous exposure to the heating element, and DO NOT leave the appliance operating unattended for extended periods.

TECHNICAL SPECIFICATIONS

Dimensions: 9.7 in. x 9.1 in. x 31.9 in.

Timer selection: 1 – 9 hours

Temperature range: 60 - 94 °F

Modes: Fan, Low heat, High heat

Remote control included: Yes

Remote control operating range: 16.4 ft

Weight: 10.27 lbs.

 
Input voltage: 120 V, 60 Hz

Rated power: 1500 W


Oscillating range: 65°

Voice control: Yes

PRODUCT OVERVIEW

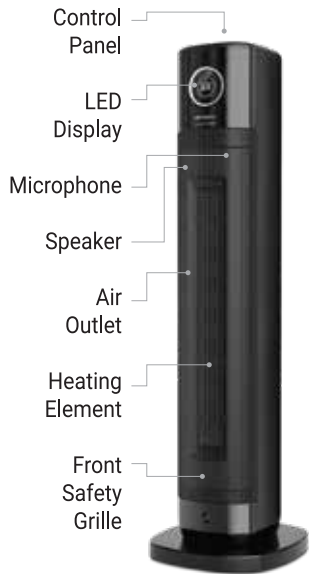

CONTROL PANEL/REMOTE CONTROL OVERVIEW

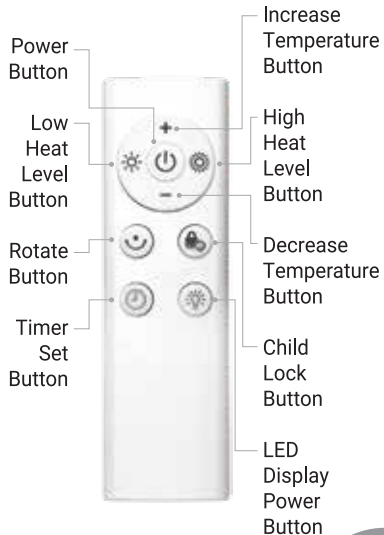 

OPERATING INSTRUCTIONS

This heater can be operated by using the control panel on top of the unit, the included remote control, or your voice. See the “Voice Control Instructions” section to learn more about the voice control function.

Power Switch

After flipping the power switch on, the LED display will light up and a beep sound will be heard indicating that voice control mode is ready.

NOTE: There is a 30-second shutdown delay when turning off the heater. Don't turn off the power switch until the shutdown delay is finished. The fan is only used to cool down the heating element when the heater is not in use.

Power Button

Press the POWER button to turn on the heater. The heater will start on fan mode by default.

Rotate Button

Press the ROTATE button to start and stop the oscillating function

Heat Level

Press the LEVEL button to switch between low heat mode, and high heat mode.

Temperature Setting

Press the INCREASE TEMPERATURE BUTTON (+) to increase the temperature 2° and press the DECREASE TEMPERATURE BUTTON (-) to decrease the temperature 2°.

NOTE: When the room temperature is higher than the set temperature, the heater will not operate.

Light Button

Press the LIGHT button to turn on and off the lights on the display.

Child Lock Button

Press and hold the CHILD LOCK button for three (3) seconds to turn on or off the child lock. When the child lock is on, all other buttons will not respond when pressed

Timer Button

Press the TIMER button to select a time for when the heater will automatically turn off. Press the button repeatedly to navigate through the timer selection. You can select from one to seven (1- 9) hours. To set the desired time, pick a time and the desired time will stay lit up on the display.

REMOTE CONTROL INSTRUCTIONS

To operate the heater with the remote control, insert two (2) AAA batteries (not included) into the back of the remote control.

The remote control uses an ON and OFF button to turn the heater on and off. All other buttons on the remote control work exactly the same as the buttons on the control panel.

NOTE: Forward operating range of remote control: 5.0m.

VOICE CONTROL INSTRUCTIONS

No App · No Wi-Fi · No Hub required

The SmartVoice Tower Fan-Heater is equipped with a microphone to listen

to voice commands and a speaker to confirm and respond to received commands. Voice control is ready for use once the power switch of the SmartVoice Fan-Heater is flipped to the “ON” position.

The wake word is the phrase that activates the voice control function. To control the SmartVoice Fan-Heater with voice commands, follow the next two steps:

- 1• Say the wake word, the SmartVoice Fan-Heater will beep to confirm activation of the voice control function.
- 2• After hearing the beep, you will have 7 seconds to use one of the commands listed below. After each command, the SmartVoice Fan-Heater will confirm the command with a voice response and a beep.
 - Once the initial command is given, you can give another command within 7 seconds of the previous one.
 - If another command is not given within 7 seconds of the previous one, say the wake word before giving a new voice command.
 - If the SmartVoice Fan-Heater does not recognize a voice command, it will not respond and continue operating according to its current settings.

VOICE COMMANDS

Function

Voice Command

Wake voice control ————— • Hey heater

Turning on the heat ————— • Turn on
• Power on

Note: The heater will activate in low mode.

Turning off the heater ————— • Heat off
• Turn off
• Shut down
• Power off

Note: The heater will turn off and the fan will continue to run for 30 seconds to cool the unit.

Function

Voice Command

Setting temperature between 60 to 94 °F ————— (say the desired temperature) degrees

Increasing the heat —————
• Heat up
• High heat

Decreasing the heat —————
• Low heat
• Heat down

Starting oscillation —————
• Rotate on
• Rotation on

Stopping oscillation —————
• Rotate off
• Rotation off

Function

Voice Command

Setting timer	• Set timer for (choose between 1 to 9) hours Sleep in (choose between 1 to 9) hours
Canceling timer	• Cancel timer
Turning on device's voice controls	• Voice control on
Turning off device's voice controls	• Voice control off
Turning on device's voice responses	• Voice response on
Turning off device's voice responses (keeping active beep responses only)	• Voice response off

Function

Voice Command

Increasing voice volume	•	Volume up
Decreasing voice volume	•	Volume down
Raising voice to maximum volume	•	Volume all the way up
Lowering voice to minimum volume	•	Volume all the way down
Turning on the LED display	•	Lights on
Turning off the LED display	•	Lights off
Turning on the child lock	•	Child lock on
Turning off the child lock	•	Child lock off

TROUBLESHOOTING

Problem

Solution

The heater will not turn on

- Check to make sure the power cord is not damaged.
- Make sure the heater is properly plugged into a grounded wall outlet.
- Make sure there is power going into the grounded wall outlet.
- Try plugging the heater into a different wall outlet.

The heater is making an unusual sound or noise

- Make sure the heater is placed on a hard, flat surface.
- Make sure the heater is not damaged and that there are no foreign objects stuck in the appliance.

Problem

The heater is turning off

Solution

- Make sure no buttons are accidentally pressed down on the remote control.
- The heater might be malfunctioning. If you believe this to be the case, stop using the heater immediately and contact customer support.
- The tip-over protection may have been activated. Make sure the heater is placed on a hard, flat surface.
- The overheat protection may have been activated. Allow the heater time to cool down before using it again.

STORAGE INSTRUCTIONS

- Turn off and unplug the heater before moving it.
- Allow the heater to cool completely before storing it.
- When the heater is not being used for a long period of time, place the heater in its original box and store it in a cool, dry place.

MAINTENANCE

- Turn off, unplug, and wait for the heater to cool completely before cleaning it.
- Use a soft, dry cloth to dust off the heater.
- Wipe down the heater with a soft, damp cloth to remove any dirt and grime.
- Do not use detergents, abrasive cleaning liquids, or agents (alcohol, gasoline, etc.) to clean the unit.
- Clean the heater regularly to ensure the appliance continues to function properly.
- Wait for the heater to dry completely before using it again.
Check and clean the air filter every two to four (2 – 4) weeks.

FILTER CLEANING

- Remove the back cover of the heater.
- Wash the air filter with warm water.
- Let the air filter dry.
- Place the air filter back on the cover and secure the back cover onto the heater.

FCC COMPLIANCE STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

 
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ETL STATEMENT

This product is ETL Listed to applicable U.S. safety standards.

DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

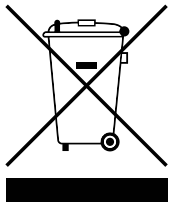

This symbol on the product or its packaging indicates that this product should not be disposed of with other household waste.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please recycle it responsibly to promote the sustainable reuse of material resources.

To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

IMPORTANT INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, injury to persons, and hyperthermia including the following:

- 1) Read all instructions before using this heater.
- 2) This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least a 9 feet (a 0.3 m) from the front of the heater and keep them away from the sides and rear.
- 3) Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- 4) Always unplug heater when not in use.

- 5) Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater, or return to authorized service facility for examination and/or repair.
- 6) Do not use outdoors.
- 7) This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- 8) Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- 9) To disconnect heater, turn controls to off, then remove plug from outlet.
- 10) Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.

- 11 To prevent a possible fire, do not block air intakes or exhaust in any manner Do not use on soft surfaces, like a bed, where openings may become blocked.
- 12 A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- 13 Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- 14 Always plug heaters directly into a wall outlet/ receptacle. Never use with an extension cord or relocatable power tap(outlet/power strip).
- 15 Hyperthermia can result in death.Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting and rapid pulse. If you begin to experience symptoms related to hyperthermia,turn off the heater and seek medical attention.

- 16 To avoid excessive room temperatures which can cause hyperthermia: DO NOT leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.

SAVE THESE INSTRUCTIONS

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT AND FULLY INSERT .

CAUTIONS

This appliance is not a toy.

This appliance is for household use only.

Do not immerse the unit in water

To avoid the risk of fire or electric shock, do not remove the housing by yourself.

Any servicing other than cleaning and user maintenance should be performed by an authorized service representative.

If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

Repair should be done by an authorized service person only.

WARRANTY REGISTRATION

Thank you for choosing Emerson SmartVoice!

To be covered under warranty, enjoy full service and support, register your product at www.emersonsmart.com, or scan the QR code:



Support:

Tech Support Toll Free: (888) 886 -7188

Hours: 9am - 7pm EST

Manufacturer: IAI Smart Inc.

E-mail: Support@emersonsmart.com

Website: www.emersonsmart.com



SmartVoice™

Manufactured and sold by IAI Smart Inc., the Emerson logo is licensed by IAI Smart Inc.

SmartVoice is a trademark of IAI Smart Inc. in the US.

All other products, brand names, company names, and logos are trademarks of their respective owners, used merely to identify their respective products, and are not meant to connote any sponsorship, endorsement, or approval.

©2025. IAI Smart Inc. All Rights Reserved.

MADE IN CHINA