

USB-A & USB-C



SmartVoice™ Wall Plug

VOICE-CONTROLLED SMART OUTLET 4-IN-1



No App · No Wi-Fi · No Hub

Smart Made Simple - Just Talk!



User Manual

READ BEFORE FIRST USE

INTRODUCTION

Thank you for choosing Emerson SmartVoice Wall Plug ES523 USB-A & USB-C! The Emerson SmartVoice Wall Plug is an offline voice-controlled socket. Freely control the socket with just the sound of your voice – no Wi-Fi, Bluetooth, or other wireless connection setup required.

This user manual is intended to provide guidelines to ensure that the operation of this product is safe and does not pose any risk to the user. Retain this manual for future reference.

WHAT CAN THIS PLUG BE USED WITH?

This plug works best with devices that turn on or off with a simple power switch—like fans, lamps, coffee makers, or dehumidifiers. But you can plug in anything you want to power with your voice! Once your SmartVoice Wall Plug is connected, you can do things like:

- Reboot your Wi-Fi without leaving the couch.
- Control mood lighting or holiday decorations.
- Disconnect hard-to-reach appliances.

SAFETY PRECAUTIONS

WARNING! Please read all the safety precautions and operating instructions before using this product. Failure to follow the guidelines established here may result in user injury or damage to the product.

This device is intended for indoor use only.

This product is intended for household use only. It is not intended for commercial use.

This device should be used in a dry location. Keep this device away from water.

Keep this device away from children. Consider using safety caps on outlets when the device is not in use.

Make sure the device is not damaged. If there are any signs of damage, do not use this device.

DO NOT exceed electrical ratings. Ensure this device can meet the requirements of the appliances you plan to plug into it.

Make sure to use a properly grounded wall outlet with this device.

DO NOT attempt to modify or repair the product by yourself. Doing so could void the warranty and cause damage or personal injury.

Extreme caution is necessary when any wall plug is used by or near children or individuals with reduced physical, sensory, or mental capabilities.

Use the product only as intended. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.

Never leave packaging material lying around unattended. Make sure all packaging material is properly disposed of.

TECHNICAL SPECIFICATIONS

Dimensions: 1.34 in. x 5.21 in. x 1.59 in.

Weight: 3.63 oz.

Color: White

Maximum voice range: approximately 13 ft. – 16 ft.


Input voltage: 125 V AC, 60 Hz

USB output: 5 V DC, 2.1 A

Output current (resistive): 15 A Max / 1875 W

Output current (tungsten): 8 A Max / 1000 W

PRODUCT OVERVIEW

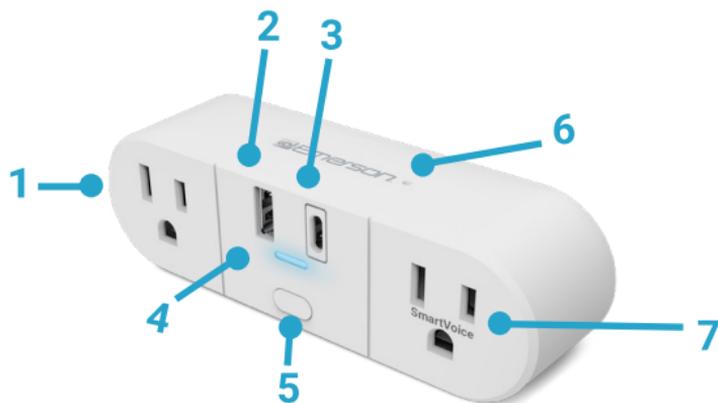

1. Standard Outlet
2. USB-A Port
3. USB-C Port
4. Indicator Light

5. Power/Program Button
6. Microphone
7. SmartVoice Outlet

INSTALLATION

To turn on the wall plug, connect the wall plug to a wall outlet.

NOTE: The “SmartVoice” outlet is best suited for one-function devices designed to simply turn on and off. Devices with multiple functions are compatible with the SmartVoice outlet, but can only be voice controlled to turn on and off.

USING THE SMARTVOICE WALL PLUG

The SmartVoice Wall Plug is equipped with a microphone to listen to voice commands and an LED light to confirm received commands.

Voice control is ready for use once the SmartVoice Wall Plug is connected to a wall outlet.

The wake word is the phrase that activates the voice control function.

NOTE: Only the devices plugged into the SmartVoice outlet on the wall plug can be voice controlled. The SmartVoice outlet is labeled “SmartVoice” on the wall plug. Devices connected to the standard outlet will always be on as long as the wall plug is connected to a wall outlet.

To control the SmartVoice Wall Plug with voice commands, follow the next two steps:

1. Say the wake word, the light on the SmartVoice Wall Plug will pulse to confirm activation of the voice control function. You can also manually wake up the wall plug by pressing the POWER/PROGRAM button. See “Indicator Light Status Chart” to identify what mode the wall plug is in.

2. Next, you will have 7 seconds to use one of the commands listed on the back. After each command, the SmartVoice Wall Plug will confirm the command with 5 quick pulses.

- Once the initial command is given, you can give another command within 7 seconds of the previous one.
- If another command is not given within 7 seconds of the previous one, say the wake word before giving a new voice command.
- If the SmartVoice Wall Plug does not recognize a voice command, it will not respond and continue operating according to its current settings.

INDICATOR LIGHT STATUS CHART

The blue indicator light can help identify what status or mode the plug is currently in.

Indicator Lights	Status
Off	Device is off
On	Device is on
Pulse every two (2) seconds	Waiting for command
Pulse every 10 seconds	Timer is active
Five (5) quick pulses	Command was received

NOTE: The “SmartVoice” outlet will not be able to identify voice commands not on the list.

SETTING TIMER ON WALL PLUG

You can set a timer for a device connected to the “SmartVoice” outlet to turn off or on. The voice command “Wake” is used to turn the device on, while voice commands “Set Timer,” “Sleep In,” or “Sleep Timer” are used to turn the device off. For example, you can say “Hey Emerson, Set Timer for 30 Minutes” or “Hey Emerson, Wake in 1 Hour.”

To cancel timers, use the voice command “Cancel Timer” to stop currently set timers.

See “SmartVoice Wall Plug: Compatible Voice Commands” section for a full list of suitable voice commands.

COMPATIBLE VOICE COMMANDS FOR SMARTVOICE WALL PLUG

Functions	Voice Commands
Wake voice control	Hey Emerson
Turning on the SmartVoice socket	Turn on Lights on Power on Power up
Turning off the SmartVoice socket	Turn off Lights off Power off Power down
Canceling all timers currently set on the SmartVoice socket	Cancel timer Cancel sleep
Setting a timer for when the SmartVoice socket will turn off	Sleep in [15, 30, or 45] minutes Sleep in [1, 2, 4, 8, or 12] hour(s) Set timer for [15, 30, or 45] minutes Set timer for [1, 2, 4, 8, or 12] hour(s)
Setting a timer for when the SmartVoice socket will turn on	Wake in [15, 30, or 45] minutes Wake in [1, 2, 4, 8, or 12] hour(s)

USING MULTIPLE SMARTVOICE PLUGS IN THE SAME ROOM

You can have up to five (5) different wall plugs in the same room. When you have multiple plugs, the wake word “Hey Emerson” will cause all plugs to respond by default. To control each plug separately, assign a unique wake word to each plug. Follow the instructions below to program each individual plug.

PROGRAMMING ADDITIONAL PLUGS

1. While the plug is inserted into the wall outlet, press and hold the POWER/PROGRAM button for three (3) seconds. The blue indicator light will flash one to five (1 - 5) time(s) depending on the wake word assigned, as shown in the “Blinks and Corresponding Wake Words” table.

For example, if you hold down the button on a wall plug and the light blinks three (3) times, then that wall plug will respond to the wake word “Hey Plug 3.”

NOTE: Each time you press and hold the POWER/PROGRAM button, the blink count increases by 1. After five (5) blinks, the cycle resets back to 1.

2. Repeat step one to add more plugs.

NOTE: The plug will remember its programmed wake word even after it's removed from the outlet.

BLINKS & CORRESPONDING WAKE WORDS

The number of blinks indicates which wake command corresponds to which active wall plug.

Number of Blinks	Wake Words
1	"Hey Plug 1" or "Hey Emerson"
2	"Hey Plug 2" or "Hey Emerson"
3	"Hey Plug 3" or "Hey Emerson"
4	"Hey Plug 4" or "Hey Emerson"
5	"Hey Emerson"

MAINTENANCE

Disconnect the wall plug before cleaning it.

Use a dry cloth to dust off the wall plug.

Unplug the device when not in use.

Regularly inspect the device to make sure there is no damage.

If there is damage, stop using the device immediately.

ETL COMPLIANCE STATEMENT

This product is ETL Listed to applicable U.S. safety standards.

DISPOSAL OF ELECTRICAL & ELECTRONIC EQUIPMENT



This symbol on the product or its packaging indicates that this product should not be disposed of with other household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please recycle it responsibly to promote the sustainable reuse of material resources.

To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

WARRANTY REGISTRATION

Thank you for choosing Emerson Smart! Register your product to enjoy full service, support, and warranty activation.

SCAN ME TO REGISTER



SUPPORT

Tech Support Toll Free: (888) 886 -7188

Hours: 9am - 7pm EST

Manufacturer: IAI Smart Inc.

E-mail: Support@emersonsmart.com

Website: www.emersonsmart.com

Thank You For Your Purchase!

Manufactured and sold by IAI Smart Inc., the Emerson logo is licensed by IAI Smart Inc. SmartVoice is a trademark of IAI Smart Inc. in the US.

All other products, brand names, company names, and logos are trademarks of their respective owners, used merely to identify their respective products, and are not meant to connote any sponsorship, endorsement, or approval.