



SmartVoice™ Tower Fan

Tower Fan ES 4007R

VOICE COMMAND LIST

Wake Word: Activate Unit:
Hey Fan Fan On
 Turn On The Fan
 Fan Off
 Turn Off the Fan

Oscillation Controls:

Rotate On / Off
Rotation On / Off

Speed Control:

Low Speed	Fan Medium
Low Fan	High Speed
Fan Low	High Fan
Medium Speed	Fan High
Medium Fan	

Increase Speed:

Fan Speed Up

Decrease Speed:

Fan Speed Down

Set Timer:

Sleep in (between (1 – 15 hours)

Cancel Timer:

Cancel Timer

Additional Commands on
The back of the card



SmartVoice™ Tower Fan

Tower Fan ES 4007R

Sleep Mode:

Sleep Mode

Canceling Sleep Mode:

Normal Mode

Turning Off Voice Controls:

Voice Control Off

Turning On Voice Control:

Voice Control On

Turning Off Voice Response:

Voice Response Off

Note: Keeping active beep responses only

Turning On Voice Response:

Voice Response On

For additional Commands and operating instructions. Please refer to the user manual provided.

Warning:

Use indoors only
Do not leave the fan unattended
Do not use near water.

NEED HELP? Contact us at:

Tech Support Toll Free: (888) 886-7188

Email: Support@emersonsmart.com

Website: www.emersonsmart.com