



SmartVoice™ Tower Fan



No App · No Wi-Fi · No Hub

Smart Made Simple - Just Talk!



ES4201R

INTRODUCTION

Thank you for choosing Emerson SmartVoice Tower Fan ES4201R! The Emerson SmartVoice Tower Fan is an offline voice-controlled fan. Freely control the fan with just the sound of your voice – no Wi-Fi, Bluetooth, or other wireless connection setup required.

This user manual is intended to provide guidelines to ensure that the operation of this product is safe and does not pose any risk to the user. Retain this manual for future reference.

PACKAGE CONTENTS

User
Manual



Remote
Control



Tower
Fan



GENERAL SAFETY

WARNING! Please read all the safety precautions and operating instructions before using this product. Failure to follow the guidelines established here may result in user injury or damage to the product.

- Use the product only as intended. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- This product is intended for household use only. It is not intended for commercial use.
- Extreme caution is necessary when any fan is used by or near children or individuals with reduced physical, sensory, or mental capabilities.
- DO NOT insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock or fire, or damage the fan.
- DO NOT attempt to modify or repair the product by yourself. Doing so could void the warranty and cause damage or personal injury. Only a repair technician may disassemble or repair this product.

- Make sure that no pieces of packaging material have been left between parts of the appliance. It may be necessary to pass over the appliance with a vacuum cleaner.
- If the fan has been damaged or is missing any parts, do not use and contact Customer Support.
- Disconnect the fan from the wall outlet before performing any maintenance on the product.
- DO NOT use water, detergents, abrasive cleaning liquids, or agents (alcohol, gasoline, etc.) to clean the product.
- Keep packaging material away from children and pets.
- DO NOT twist, pull, or yank the power cord of this product.
- Never place heavy objects on this product.
- DO NOT let children climb on this product.
- Keep children and pets away from this product to prevent it from tipping over.
- Never place the power cord near any heat source.
- This product is not a toy. This product is not intended for use by children under the age of 8 years old.

BATTERY SAFETY FOR REMOTE CONTROL

WARNING - Ingestion Hazard: This product contains a button cell or coin battery in the provided remote control. Keep batteries out of reach of children. Swallowing may lead to serious injury or death. Batteries can cause severe internal burns within 2 hours of ingestion. If you suspect a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.

- Dispose of used batteries properly according to local regulations. Insert batteries with correct polarity (+/-) as marked in the battery compartment.
- Remove batteries if the product will not be used for an extended period of time to avoid leakage and corrosion.
- Keep batteries out of reach of children and pets.
- DO NOT recharge, short-circuit, or disassemble batteries.

LOCATION SAFETY

- DO NOT use the product outdoors. This product is intended for indoor use only.
- Ensure the fan is on a stable, secure surface to eliminate the potential of tipping it over.
- This fan is not intended for use in wet or damp locations. Never place the fan where it may fall into a bathtub or another water container.
- Always turn off and unplug the fan before moving or relocating the product.
- Make sure the fan is placed in a well-ventilated area.

ELECTRICITY SAFETY

- DO NOT leave the fan unattended when in use. Always unplug the fan when not in use.

- DO NOT operate the fan with a damaged cord or plug, or after the fan malfunctions, has been dropped or damaged in any manner. Discard the fan, or return it to an authorized service facility for examination and/or repair.
- DO NOT run cord under carpeting. DO NOT cover the cord with throw rugs, runners, or similar coverings. DO NOT route the cord under furniture or appliances. Arrange the cord away from high-traffic areas and where it will not be tripped over. To disconnect the fan, turn the controls off, then remove the plug from the outlet.
- To protect against the risk of electrical shock, never submerge this fan in water or any other liquid.
- Always plug the fan directly into a wall outlet/receptacle.
- Never use the fan with an extension cord or relocatable power tap (outlet/power strip).
- Please note that it is normal for the plug and cord to feel warm to the touch.

- A plug or cord that becomes hot to the touch or becomes distorted in shape may be a result of a worn electrical outlet. Worn outlets or receptacles should be replaced prior to further use of the fan. Plugging the fan into a worn outlet/receptacle may result in overheating of the power cord or fire.
- If there is a loose fit between the plug and the socket or the plug becomes very hot, the socket may need to be replaced. Check with a qualified electrician to replace the socket.
- This appliance has a polarized plug (one prong is wider than the other). To reduce the risk of electric shock, this plug is designed to fit into a polarized outlet in only one direction. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to bypass this safety feature.

WARNING: If the supply cord is damaged, it must be replaced by manufacturer, its service agent, or qualified personnel to avoid a hazard.

TECHNICAL SPECIFICATIONS

Dimensions: 11.8 in. x 11.8 in. x 42.1 in.

Weight: 9.3 lbs.

Input voltage: AC 120 V, 60 Hz

Rated power: 50 W

Timer selection: 1 - 15 hours

Number of fan speeds: 3

Modes: Normal, Sleep

Oscillating range: 70°

Voice control: Yes

Remote control included: Yes

ASSEMBLY INSTRUCTIONS

Make sure you remove all packaging material from the fan.

Make sure all parts are intact.

Inspect the product for any damage.


Follow these four steps:




Connect the front base and the rear base together.



Press down on the edges to click the two (2) base halves in place.

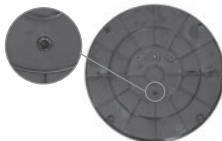


Align and insert the bottom of the tower fan body into the opening on the top of the base.

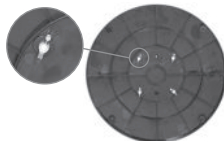


Secure the base to the bottom of the tower fan body with the four (4) included wing screws.

PRODUCT OVERVIEW

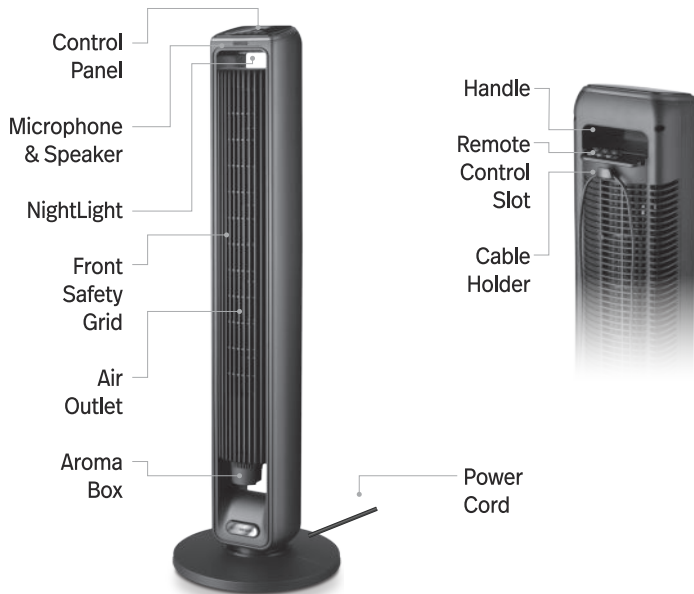

CONTROL PANEL/REMOTE CONTROL OVERVIEW

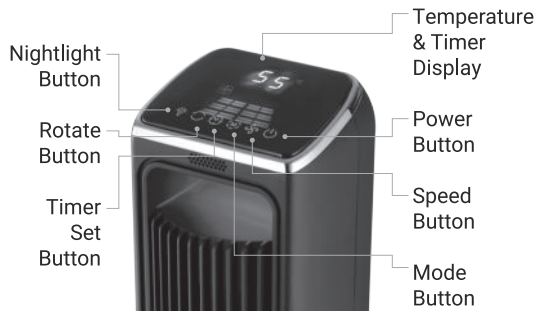

OPERATING INSTRUCTIONS

This tower fan can be operated by using the control panel on top of the unit, the included remote control, or your voice.

See the “Voice Control Instructions” section to learn more about the voice control function.

Power Button

Press the POWER button to turn on the fan. The fan will start on the lowest speed by default.

NOTE: When the fan is plugged in, the LED display will light up indicating that the fan is in standby mode and the voice control mode is ready. The LED display will show the current room temperature once the fan is plugged in.

Speed Button

Press the SPEED button to switch between low, medium, or high fan speeds.

Mode Button

Press the MODE button to switch between normal or sleep mode. In sleep mode, the fan speed will decrease from the current speed every 30 minutes until it reaches low speed. The LED display will go off after 10 seconds.

Timer Button

Press the TIMER button to select a time for when the fan will automatically turn off. Press the button repeatedly to select a time to set. You can select from one (1) hour to 15 hours. To set the desired time, pick a time and wait for the screen to revert back to the temperature display to indicate the desired time has been set.

Rotate Button

Press the ROTATE (OSC) button to start and stop the oscillating function.

Nightlight Button

Press the NIGHTLIGHT button to turn on or off the nightlight.

REMOTE CONTROL INSTRUCTIONS

Light Button

Press the LIGHT button to turn on or off ambient lighting.

Press and hold the LIGHT button for 3 seconds to activate silent mode.

NOTE: The other buttons on the remote control work the same as the buttons on the control panel.

WARNING: CHOKING HAZARD – Small Parts.

This product contains coin or button cell batteries, which are small and may pose a choking hazard. Keep batteries out of reach of children. DO NOT allow children to handle or replace batteries.

To operate the tower fan with the remote control, remove the battery cover by pulling it straight out.



Battery Replacement



- 1 Press the lock tab on the battery holder in the back of the remote control.



- 2 Pull the battery holder outward.



- 3 Remove the CR2025 battery and replace it with a new one of the same type. Make sure the (-) side is facing up.



- 4 Push the battery holder back into the remote control until it is securely in place.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

VOICE CONTROL INSTRUCTIONS

No App · No Wi-Fi · No Hub required

The SmartVoice Tower Fan is equipped with a microphone to listen to voice commands and a speaker to confirm and respond to received commands.

Voice control is ready for use once the SmartVoice Tower Fan is connected to a wall outlet.

The wake word is the phrase that activates the voice control function.

To control the SmartVoice Tower Fan with voice commands, follow the next two steps:

- 1 Say the wake word, the fan will beep to confirm activation of the voice control function.

2 After hearing the beep, you will have 7 seconds to use one of the commands listed below. After each command, the fan will confirm the command with a voice response and a beep.

- Once the initial command is given, you can give another command within 7 seconds of the previous one.
- If another command is not given within 7 seconds of the previous one, say the wake word before giving a new voice command.
- If the fan does not recognize a voice command, it will not respond and continue operating according to its current settings.
- Make sure you are within listening distance of the fan. Voice commands are less effective in noisy environments or from far distances.

VOICE COMMANDS

Function

Voice Command

Wake voice control	• Hey fan
Turning on the fan	• Turn on the fan • Fan on
Turning off the fan	• Turn off the fan • Fan off
Setting low fan speed	• Low speed • Low fan • Fan low
Setting medium fan speed	• Medium speed • Medium fan • Fan medium
Setting high fan speed	• High speed • High fan • Fan high

Function

Voice Command

Increasing fan speed	• Fan speed up
Decreasing fan speed	• Fan speed down
Starting oscillation	• Rotate on • Rotation on
Stopping oscillation	• Rotate off • Rotation off
Setting timer	• Sleep in (choose between 1 to 15) hours
Canceling timer	• Cancel timer
Activating sleep mode	• Sleep mode
Canceling sleep mode	• Normal Mode
Activating silent Mode	• Be quiet

Function

Voice Command

Turning on device's voice controls	• Voice control on
Turning off device's voice controls	• Voice control off
Turning on device's voice responses	• Voice response on
Turning off device's voice responses (keeping active beep responses only)	• Voice response off
Increasing voice volume	• Volume up
Decreasing voice volume	• Volume down
Raising voice to maximum volume	• Volume all the way up
Lowering voice to minimum volume	• Volume all the way down
Turning on the nightlight	• Lights on
Turning off the nightlight	• Lights off

FUSED SAFETY PLUG

This fan contains a fused safety plug. The fused safety plug protects the fan from overload or short-circuit situations. Follow these instructions below on how to properly replace the safety plug fuse, if needed:

- Make sure to unplug the power cord from the wall outlet.
- Make sure to use a 5-amp, 125 V fuse.



Slide the fuse cover on top of the plug towards the metal prongs.



Carefully remove the fuse from the plug.



Insert a new fuse into the plug.



Slide the fuse cover towards the plug.

WARNING: Fire Hazard: Do not replace attachment plug. The plug contains a safety device (fuse, AFCI, LCDI) that should not be removed. Discard the product if the attachment plug is damaged. This product should not be altered or modified by users.

AROMA BOX



- 1• Carefully pull out the aroma box.
- 2• Slowly drip aromatherapy liquid onto the sponge located in the aroma compartment. No more than 1.2 fl. oz. (36 mL) should be added to the aroma compartment at a time.
- 3• Insert the aroma box back into the fan.

Make sure to clean the aroma compartment with a damp cloth after each use.

Sponge cleaning

- Remove the sponge from the aroma compartment.
- Rinse the sponge with warm water. Use mild soap if needed.
- Let the sponge dry completely and place it back into the aroma compartment.

Check and clean the sponge every 1 - 2 weeks. Clean the sponge before using a different essential oil to avoid mixing scents.

TROUBLESHOOTING

Problem

Solution

The tower fan will not turn on

- Check to make sure the power cord is not damaged.
- Make sure the tower fan is properly plugged into a grounded wall outlet.
- Make sure there is power going into the grounded wall outlet.
- Try plugging the tower fan into a different wall outlet.

The tower fan is making an unusual sound or noise

- Make sure the tower fan is placed on a hard, flat surface.
- Make sure the tower fan is not damaged and that there are no foreign objects stuck in the appliance.

Problem

The tower fan is turning off

Solution

- Make sure no buttons are accidentally pressed down on the remote control.
- The tower fan might be malfunctioning. If you believe this to be the case, stop using the tower fan immediately and contact customer support.

MAINTENANCE

- Turn off and unplug the fan before cleaning it.
- Use a soft, dry cloth to dust off the fan.
- Wipe down the fan with a soft cloth dampened with warm water to remove any dirt and grime.
- Do not use detergents, abrasive cleaning liquids, or agents (alcohol, gasoline, etc.) to clean the unit.
- Clean the fan regularly to ensure the appliance continues to function properly.

STORAGE INSTRUCTIONS

- Turn off and unplug the tower fan before moving it.
- Place the remote control in the slot located in the back of the tower fan.
- When the tower fan is not being used for a long period of time, place the fan in its original box and store it in a cool, dry place.

FCC COMPLIANCE STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ETL STATEMENT

This product is ETL Listed to applicable U.S. safety standards.

DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on the product or its packaging indicates that this product should not be disposed of with other household waste.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please recycle it responsibly to promote the sustainable reuse of material resources.

To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

WARRANTY REGISTRATION

Thank you for choosing Emerson SmartVoice!

To be covered under warranty, enjoy full service and support, register your product at www.emersonsmart.com, or scan the QR code:



Support:

Tech Support Toll Free: (888) 886 -7188

Hours: 9am - 7pm EST

Manufacturer: IAI Smart Inc.

E-mail: Support@emersonsmart.com

Website: www.emersonsmart.com



SmartVoice™

Manufactured and sold by IAI Smart Inc., the Emerson logo is licensed by IAI Smart Inc.

SmartVoice is a trademark of IAI Smart Inc. in the US.

All other products, brand names, company names, and logos are trademarks of their respective owners, used merely to identify their respective products, and are not meant to connote any sponsorship, endorsement, or approval.

©2025. IAISmart Inc. All Rights Reserved.

MADE IN CHINA