



SmartVoice™ Tower Fan

Tower Fan ES 4201R

VOICE COMMAND LIST

Wake Word: Hey Fan
Activate Unit: Fan On
Turn On The Fan
Fan Off
Turn Off the Fan

Oscillation Controls:

Rotate On / Off
Rotation On / Off

Speed Control:

Low Speed	Fan Medium
Low Fan	High Speed
Fan Low	High Fan
Medium Speed	Fan High
Medium Fan	

Increase Speed:

Fan Speed Up

Decrease Speed:

Fan Speed Down

Set Timer:

Sleep in (between (1 – 15 hours)

Cancel Timer:

Cancel Timer

Additional Commands on
The back of the card



SmartVoice™ Tower Fan

Tower Fan ES 4201R

Sleep Mode:

Sleep Mode

Canceling Sleep Mode:

Normal Mode

Turning Off Voice Controls:

Voice Control Off

Turning On Voice Control:

Voice Control On

Turning Off Voice Response:

Voice Response Off

Note: Keeping active beep
responses only

Turning On Voice Response:

Voice Response On

**For additional Commands and
operating instructions. Please refer
to the user manual provided.**

Warning:

Use indoors only
Do not leave the fan unattended
Do not use near water.

NEED HELP? Contact us at:

Tech Suport Toll Free: (888) 886-7188

Email: Support@emersonsmart.com

Website: www.emersonsmart.com