



Air Fryer Voice Control Chart

Wake Words

Hey Air fryer
Hey Fryer
Hey Emerson

Power Control

Power off
Turn the oven off
Turn off
Switch off the fryer

Cancel Cooking

Stop cooking
Cancel
Quit cooking
Cancel the cooking
End the timer

Light

Turn the light on
Light on/ off

Volume

Increase the volume
Decrease the volume
Max the volume
Minimize the volume

Preheat/Flip

Turn preheat on
Preheat off
Switch flip reminder off
Flip reminder off

Voice Control

Voice control on/off

Set Timer/Temperature

Set timer to 15 minutes and temperature to 220°
Set oven timer to 34 minutes
Decrease the oven temperature by 60° fahrenheit
Set temperature to 365°
Temperature 355°

Timer Control

Resume/Pause/Start the oven timer
Resume/Pause/Start the timer
Resume/Pause/Start cooking
Timer Resume/Pause/Start

Timer

Increase/decrease the oven timer by 10 minutes
Increase/decrease 10 minutes
Timer increase/decrease 10 minutes
Oven timer 15 minute increase/decrease
20 minutes timer increase/decrease





Checking Air Fryer Status

What's the cooking status?
How much time is left?
What is the current oven temperature?
What is the time remaining?
How much longer until the cooking ends?

Examples of Cooking Commands

Can you please cook 10 chicken nuggets?
Can you air fry jumbo shrimp?
I want you to dehydrate fruits for 6 hours
Broil hot dogs at 350 degrees for 10 minutes.
Reheat 3 slices of pizza.
Help me bake garlic bread.
I want you to air fry turkey legs at 400°.
Let's air fry pizza pockets.

Internal Cooking Temperatures

							
Beef/ Lamb		Pork		Poultry		Fish	
Rare	120° - 125°						
Medium Rare	130° - 135°	Medium*	140° - 145°	Fully Cooked	165°	Fully Cooked*	145°
Medium*	140° - 145°	Medium Well	150° - 155°				
Medium Well	150° - 155°	Well	160° - 165°				
Well	160° - 165°						

NOTE: Always check the internal temperature of meat to ensure it's fully cooked before eating. Undercooked meat can pose health risks.
*USDA recommends cooking beef, pork, veal, lamb, fish, and shellfish to a minimum internal temperature of 145°F.

Voice Control At a Glance

Set Up

Plug the air fryer into a wall outlet. You will hear: *"Welcome, say 'Hey Air Fryer' to get started."* This means the voice control is ready.

Wake Word

The wake word is the phrase that activates the voice control function. For this air fryer, the wake word is: ***"Hey Air Fryer."***

Activating Voice Control

Say the wake word. The air fryer will respond with *"Welcome Back"* to confirm activation. You will then have 10 seconds to give a command.

Giving Commands

After each command, the air fryer will confirm with a voice response and a beep. You can give another command within 10 seconds of the previous one. If more than 10 seconds pass, you must say the wake word again before giving a new command.

Unrecognized Commands

If the air fryer does not recognize your command, it will respond: *"Sorry, can you tell me one more time?"*

If the following command is unrecognizable again, a short beep will be heard and the listening window will close. To start over, say the wake word.

Happy Cooking!